


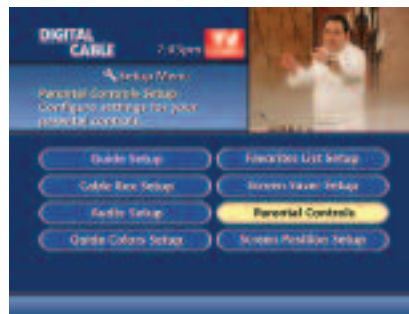 
Parental Controls

i-Guide provides a **Parental Controls** feature, which allows you to restrict viewing and purchases of TV programs and services based on your viewing preferences. To activate **Parental Controls** set a personalized 4-digit PIN to place **Locks** by movie rating, TV and content ratings, channels and titles. You can also hide adult titles from being displayed on-screen.

 
Parental Controls Setup

Locks can be set quickly in a variety of ways anytime while watching television or using the guide:

- Press the **LOCK** button on your remote.
- Select the  icon on the **Quick Menu** or **Info** screen to lock the current program or channel.
- Access **Parental Controls** from the **Main Menu** or **Setup Menu** to setup all **Locks**.



With any of these actions, if you have not set up a **PIN**, you'll be prompted to enter a 4-digit **PIN** to activate the **Locks** feature. If you have already set up a **PIN**, enter your number. (See Setup Section for more information on how to set up **PINs**.)

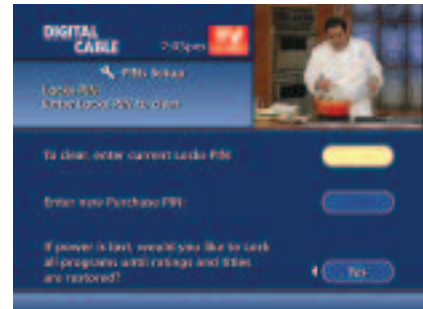

The **Parental Controls** features also provide you the opportunity to lock programs and movies by ratings and content.

From the **Parental Controls** button on the **Main Menu** filter your locks by **Movie Rating, TV Rating, TV Content, Channel, Title** or **Service**. Under **TV Content**, you can lock the level of explicit content based on your viewing preferences for Violence, Language, Sexual Situations, and Suggestive Dialogue.



In addition, select **Movie Ratings** or **TV Ratings** to block content by rating. The guide will automatically lock that rating and the more restrictive ratings. For example, when you lock PG-13, movies with R, NC-17 and Adult ratings will also be locked.



MOVIE RATINGS	TV RATINGS	TV CONTENT RATINGS			
		Violence (FV, V)	Language (L)	Sexual Situations (S)	Suggestive Dialogue (D)
G	TV-Y				
PG	TV-Y7	Fantasy Violence			
PG-13	G				
R	TV-PG	Moderate Violence	Infrequent Coarse	Some Sexual Situations	Some Suggestive Dialogue
NC-17	TV-14	Intense Violence	Strong Coarse	Intense Sexual Situations	Intensely Suggestive Dialogue
Adult	TV-MA	Graphic Violence	Crude Indecent	Explicit Sexual Activity	

Parental Controls for On Demand

 
Parental Control settings include **On Demand** programming. To block all access to **On Demand**, select **Parental Controls** from the **Main Menu**, then **Service Locks**.

Guide Tip From the **Main Menu** you can access all Setup features by selecting Setup. From here, you can setup all related options for your preferences, including **Parental Controls**.



View Locked Programs

To view programs and channels you have Locked, tune to the program or select from the listings. Enter your **PIN** when prompted. **Locks** will automatically be restored when you tune away from the channel or turn your set-top box off.

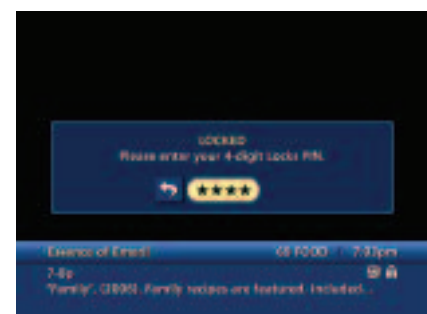

Bypass or Clear Locks

Temporarily open or clear all **Locks** for easier viewing. Under **Setup** from the **Main Menu**, select **Parental Controls Setup**, then **Master Locks**, and change the options from **No** to **Yes**.




Restore Locks

Locks may be restored in any of the following ways:

- While watching TV, press the **LOCK** button anytime and enter your **PIN**.
- Select **Parental Controls Setup** from the **Setup Menu**, then under **Master Locks** change the options from **Yes** to **No** to turn **Locks** back on.
- Turn the set-top box off and back on.

Guide Tip

A  appears in the Instant Information to indicate a program has been locked. To Unlock, press the **LOCK** button and enter your **PIN**.